




Ceiling Grid Covers

GridMAX[®]

- Will not rust or show scratches
- Simple, one-person installation
- Available in a wide range of colors and finishes
- Works on 2' x 2' or 2' x 4' ceiling grid systems
- Pre-notched main covers provide seamless transitions at cross tee intersections
- Components are factory-cut to standard grid dimensions
- Eliminates costly facility downtime for demolition and replacement

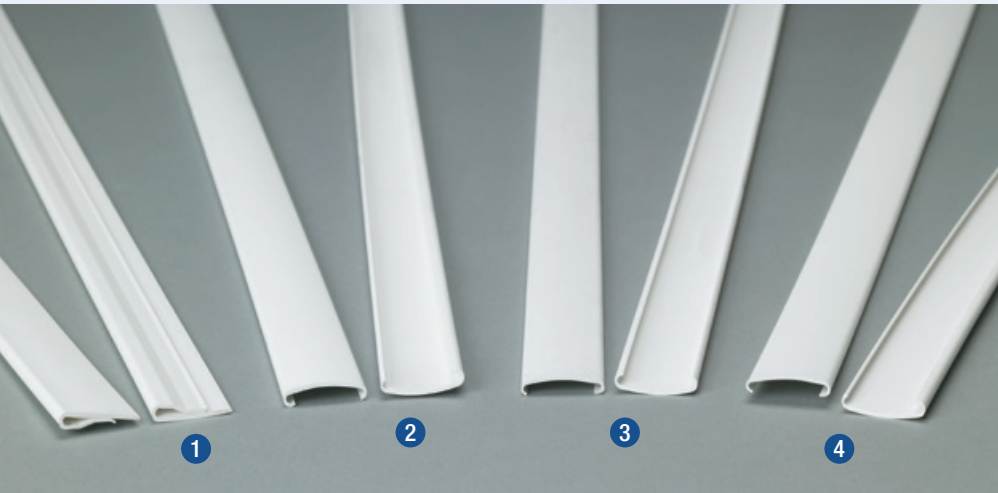

Ceiling Grid Covers

GridMAX®

GridMAX is the low-cost alternative to replacing or repainting rusted, stained or deteriorated metal grid. These high-grade vinyl covers easily install over existing metal grid, changing the look of a room at a fraction of the cost of other refurbishment solutions.

Surface Burning Characteristics	ASTM E 84 Class "A" fire-rated — Flame and Smoke V.O. rating under U.L. 94
Safety	Approved for food manufacturing/processing
Durability	Rust and corrosion resistant
Material	White and solid colors: virgin-grade vinyl Metallic finishes: virgin-grade vinyl with hot foil laminate
Compatibility	Works with any Imperial or Metric grid system May not be compatible with certain shadow-line tile types (consult manufacturer for specifications)
Warranty	25-year limited warranty



Black GridMAX with Genesis Smooth Pro (Black) over white grid



Black GridMAX over white grid




GridMAX in Cracked Copper with matching Fasade panels over white grid

Grid Face	Description	Item #	Dimensions
1	15/16" & 1" 4' Wall Molding Cover	250-XX	48" x 1" x 1/8"
2	15/16" 4' Tee Cover	230-XX	47" x 1" x 1/8"
	1" 4' Tee Cover*	232-00	47" x 1 1/8" x 1/8"
3	15/16" 4' Main Cover	210-XX	48" x 1" x 1/8"
	1" 4' Main Cover*	212-00	48" x 1 1/8" x 1/8"
4	15/16" 2' Tee Cover	220-XX	23" x 1" x 1/8"
	1" 2' Tee Cover*	222-00	23" x 1 1/8" x 1/8"

*All 1" GridMAX covers are only available in White
Note: Revealed-edge tiles require minimum of 3/8" lip for proper fit with GridMAX grid covers



GridMAX is available in multiple colors & finishes that match Fasade® Decorative Thermoplastic Ceiling Panels. Visit www.fasadeideas.com for more information.

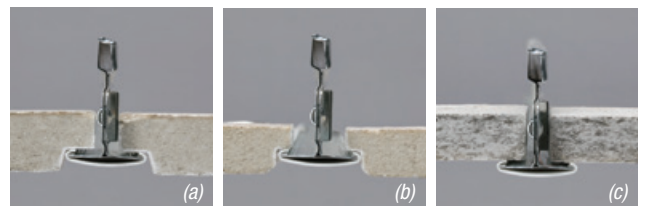

Tile interface options: (a) beveled tegular (b) square tegular (c) flat